


Changing the Ring Types for The SBX-IP 320

Use this feature to set different ring types for your incoming intercom calls and external (CO) calls. This allows you to instantly know if you are receiving an intercom call or a call from an outside source.

1. Use ▲ on the Nav Button to access the Programming Menu
2. Press the **OK** soft button to select the BASIC PROGRAM option.
3. Use ▲▼ on the Nav Button to scroll through the options.

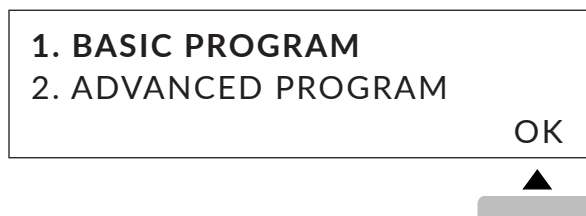

When you find RING PROGRAM option:


4. Press the **OK** soft button to select the Ring Program option.



5. Use ▲▼ on the Nav Button to toggle between the ICM (Intercom) and CO (outside call) options.



6. Press the **NEXT** soft button to scroll through the various ring types. As you scroll, the ring types will sound.

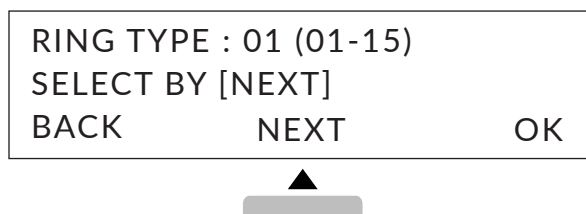

When you hear the ring type you want to use for the currently selected call type (ICM or CO):

7. Press the **OK** soft button to save the setting.

If you have any questions, please feel free to call us @ 303.688.6191

