

iPECS

LIP-7008D

TABLE OF CONTENTS

1. INTRODUCTION	1
1.1 General.....	1
1.2 Feature Information	1
1.3 Feature Groupings.....	1
1.4 iPECS LIP-7008D Phone Description.....	2
2. IPECS PHONE LCD & SPEAKERPHONE	3
2.1 LCD Operation.....	3
2.2 Using the Speakerphone	3
3. RECEIVING CALLS	4
3.1 Answering a Call While Idle	4
3.2 Responding to a Call a While Busy	4
3.3 Using Answering Machine Emulation (AME).....	5
3.4 Differential Ring Signals	6
3.5 Answering Calls at Night	7
3.6 Answering Calls to Other Stations.....	7
3.7 Using Do-Not-Disturb (DND) to Block Incoming Calls	7
3.8 Forwarding Calls.....	8
3.8.1 Forwarding calls to another station or Voice Mail	8
3.8.2 Forwarding calls to an external number.....	9
3.8.3 Forwarding callers to a Text Message	10
4. PLACING A CALL.....	12
4.1 Internal Calls.....	12
4.1.1 Placing Intercom calls	12
4.1.2 Using Camp-On when calling a busy station	12
4.1.3 Leaving a Message Wait.....	13
4.2 External Calls	14
4.2.1 Placing external CO/VoIP calls	14
4.2.2 Waiting for the next available CO/IP line	15
4.2.3 Account Codes: Tracking External calls for billing	15
4.2.4 Disabling dialing from your phone.....	16
4.2.5 Temporarily overriding dialing restrictions at a phone	16
4.3 Using Automated Dialing	17
4.3.1 Using Last Number Redial (LNR)	17
4.3.2 Using and Entering Save Number Dial	17
4.3.3 Using System Speed Dial Numbers.....	18
4.3.4 Using and Entering Station Speed Dial Numbers	18
4.3.5 Using Dial by Name and Entering your Name	19
4.3.6 ACNR: To retry a busy external number until answered.....	20
5. TRANSFER, CONFERENCE & OTHER CALL HANDLING	21

5.1	Call Transfer: Sending a call to a different destination	21
5.2	Call Hold: Placing a call in a waiting state	21
5.3	Broker Call: Switching between two calls	22
5.4	Joining Multiple People in a Conference	22
5.4.1	Setting up & Joining a Conference Room	23
5.5	Call Park: Placing a call on hold to Page	24
5.6	Two-Way Record: Recording calls	24
6.	LEAVING & RESPONDING TO MESSAGES.....	25
6.1	Responding to a Station Message Waiting Indication.....	25
6.2	Responding to a CLI Message indication	26
6.3	Getting Voice Mail Messages	26
6.4	Sending and Receiving Short Text Messages.....	27
7.	REMOTE SYSTEM ACCESS	29
7.1	Direct Inward System Access (DISA)	29
7.2	Mobile Phone Extension.....	29
8.	MISCELLANEOUS FEATURES	31
8.1	Background Music and Music on Hold	31
8.2	Using Internal, External and Meet-Me Paging	31
8.3	Push-To-Talk (PTT) Page	32
8.4	Wake-Up Alarm	32
8.5	Alarm/Door Bell	33
8.6	Power Fail Transfer	33
8.7	System Voice Memo.....	34
8.8	Hot Desk.....	35
9.	WORKING WITH PBX, CENTREX & ISDN FEATURES.....	36
9.1	Access PBX or Centrex	36
9.2	Access the ISDN Network	36
9.2.1	Using the Keypad facility to access ISDN features	36
9.2.2	Using ISDN Supplementary Services	37
9.2.3	Activating ISDN Caller ID Restriction.....	37
10.	SETTING FEATURES & FLEX BUTTONS.....	38
10.1	Entering Station Program Data.....	38
10.2	Assigning Features to Flex Buttons	38
11.	APPENDIX A FLEXIBLE NUMBERING PLAN.....	39
12.	APPENDIX B USER PROGRAM CODES.....	42

1. Introduction

1.1 General

Your telephone is connected to an advanced technology highly versatile fully featured telecom system designed to make office communications easy and productive. Employing state of the art Voice over Internet Protocol (VoIP) technology, voice and data converge on a single IP packet network. Because each iPECS Phone is an IP appliance, it can be moved easily throughout the office LAN and maintain normal operation.

1.2 Feature Information

We have taken every effort to make this user guide simple and straightforward. The guide starts with the simpler operations of the iPECS Phone Speakerphone, moves to receiving and placing calls and then to more advanced features. Each section includes a brief and basic description of each feature and step-by-step operations

The operations shown in this guide use the system's base default Numbering Plan. Your Numbering Plan may be different. Some features may not be available for you to access or may be subject to certain limitations based on the set-up of the system

Under certain operation conditions this equipment cannot be relied upon to make emergency calls. Alternative arrangements should be made for access to the emergency services.


1.3 Feature Groupings

Features have been divided into groups, *Receiving calls*, *Placing calls* etc. Within each group, features are arranged according to the difficulty of operation and frequency of use. In some cases, a feature must be assigned to a Flex button. Every effort has been taken to divide the features into a logical and consistent sequence so that features can be quickly located.


1.4 iPECS LIP-7008D Phone Description

The iPECS LIP-7008D Phone incorporates the latest in VoIP technology and user interface to provide you with a cost effective, simple to use, productive communications tool. It includes a 2-line 24-character per line LCD.

Features and functions of your iPECS are accessed either using the Fixed or Flexible buttons. In the remainder of this User Guide, the Fixed or Flexible buttons are shown with a box surrounding the **BUTTON**.

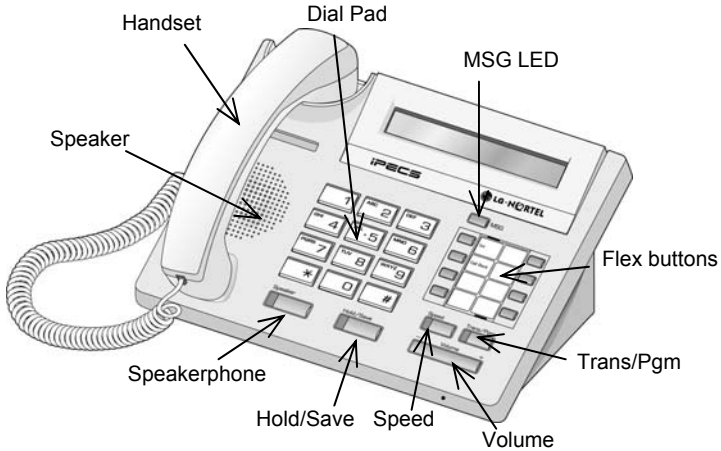

iPECS LIP-7008D Phone Diagram

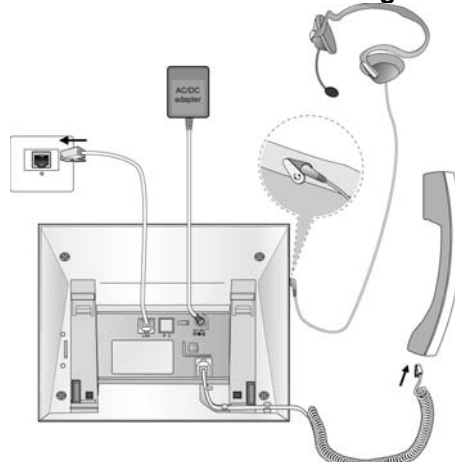

iPECS LIP-7008D Connections

2. iPECS Phone LCD & Speakerphone

2.1 LCD Operation

The Liquid Crystal Display (LCD) of the iPECS LIP-7008D Phone has two lines of 24 characters each. The LCD is used to convey information to you. It provides date, time and station number display while idle. It will also provide called/calling name/number display, feature status and a menu to guide you through *User Program* selections.

2.2 Using the Speakerphone

Activate the iPECS Speakerphone at any time (except for Paging) in place of lifting the handset to receive or place calls. Place calls using **On-hook Dialing**; dialing while using the Speakerphone.

In addition, you may switch between the handset and Speakerphone during a call. By keeping the handset Off-hook, you activate the **Group Listen** feature, which provides incoming audio over the speaker with outgoing audio from the handset. This allows a local 'group' to listen to both sides of the conversation without interfering with the conversation.

While on the Speakerphone, you can **Mute** the microphone with the **MUTE** button. When Mute is active, the **MUTE** button LED will be ON. A Flex button must be assigned for Mute operation (refer to *Section 10.2, Assigning Features to Flex Buttons*).

With **Auto Speaker Select**, when you activate/access a feature by pressing its button, the Speakerphone is activated automatically.

When using a **Headset**, the **SPEAKER** button controls the On/Off-hook state for the phone.

OPERATION

To activate the Speakerphone to answer or place a call:

- Press **SPEAKER**; the phone will go off-hook presenting audio from the speaker and to the microphone.

To control the volume of the Speakerphone or handset:

- Press **▼ VOLUME ▲**.

To Mute the microphone:

- Press **MUTE**.

To activate Group Listen while on an active handset call:

- Press **SPEAKER**.

3. Receiving Calls

3.1 Answering a Call While Idle

There are 3 basic types of incoming calls; **Internal/External Ringing** calls, **Intercom Voice Announce** calls, and *Hold* recalls.

Your phone may be assigned a **Ring Line Preference** to determine the order incoming calls are answered by lifting the handset. Otherwise, you must press the flashing Flex button.

External calls to an iPECS Phone will appear under the CO/IP line button or a **LOOP** button. External calls are from CO lines or VoIP channels that are programmed to ring at your phone. For external calls, **Delay Ring** may be assigned allowing others to answer the call before the call rings at your phone.

Calls can be forwarded in some manner from another user; if providing call coverage for other users, you may also receive **Station Call Coverage** calls.

Calls placed on **Hold**, including Transfers, parked calls, etc., will **Recall** if left on hold for too long.

ICM Voice Announce calls are answered based on the **ICM Signaling mode** at the receiving phone; in Hands-Free (HF) mode, after the splash tone and announcement, speak normally into the microphone. In the Privacy (PV) mode, lift the handset to respond. The **ICM Signaling mode** can be assigned in *Station Programming*.

The LCD will display the calling number or, if available, the name of the Station or CO/VoIP line, **CO Line Name Display**.

OPERATION

To answer a call ringing at your phone:

- Lift the handset and, then press the flashing Flex button (as needed), the call will be connected.

To respond to an Intercom Voice Announce call:

- In **HF** mode signaling, simply speak as normal into the microphone or,
- In **Privacy** mode signaling, lift the handset to respond.

3.2 Responding to a Call a While Busy

While you are busy on another call, you may receive Muted Ring, Camp-On tones, or Voice-Over announcements. Muted Ring is provided over the speaker of your Phone indicating a **Call Waiting**. You also may receive **Camp On** tones, a burst of tones on top of the existing call, as an indication of a call waiting.

While busy, certain stations can activate **Voice Over** to your phone. In this case, audio is received from both the active call and the **Voice Over** announcement at the same time.

Respond to any of these **Off-hook Signals** in one of several ways: place the existing call on **Hold** and respond to the new incoming call, activate **One-time DND**, send a **Silent Text Message**, or ignore the new call. A **[DND]** Flex button is required for One-Time DND.

Silent Text Message requires a **[TEXT MESSAGE]** button, and cannot be sent to a SLT or other non-display terminal.

The Attendant or Secretary may use **Intrusion** to announce a call while you are busy.

OPERATION

To answer a Call Waiting:

- Press the **[HOLD/SAVE]** button, and/or
- Press the flashing **[FLEX]** button.

To activate One-time DND:

- Press the **[DND]** button.

To send a Silent Text Message:

- Press the programmed **[TEXT MESSAGE]** button,
- Select the desired message to send.

3.3 Using Answering Machine Emulation (AME)

When a call is connected to your voice mail, you can screen the call as with a normal Answering Machine. The caller's voice is played over your speaker while the message is being recorded. There are two methods of notification and call screening provided, **Ring** or **Speaker mode**.

In the Ring mode, the AME (Answering Machine Emulation) Flex button will flash to notify of a call. You may press the Flex button to hear the caller as the voice message is stored. In the Speaker mode, when the call is sent to the voice mailbox, the caller's voice is automatically broadcast over the speaker of your iPECS Phone.

You may terminate screening, leaving the caller in voice mail to record a message, talk with the caller and record the conversation in the mailbox, or answer the call and disconnect the Voice Mail. The AME feature is only available when using the iPECS integrated Voice Mail; a **[MUTE]** and **[AME]** button are required.

OPERATION

To assign an AME button:

Ring Mode –

- **[TRANS/PGM]** + **[FLEX]** + 564 + 0 + **[HOLD/SAVE]**

Speaker Mode –

- **[TRANS/PGM]** + **[FLEX]** + 564 + 1 + **[HOLD/SAVE]**

To screen a call in the Ring mode:

- Press the flashing **[AME]** button, the caller's voice is broadcast over the station speaker and stored in the voice mailbox (in the Speaker operation mode, broadcast is automatic).

To stop the voice broadcast and leave the caller in Voice Mail:

- Press the illuminated **[SPEAKER]** button.

To talk with the caller and record the conversation in Voice Mail:

- Press the illuminated **[MUTE]** button.

To answer the call and cancel the voice message recording:

- Press the illuminated **[AME]** button, the caller is connected and the Voice Mail disconnected.

3.4 Differential Ring Signals

When multiple phones in a small area ring, it can be difficult to tell which are ringing. The iPECS Phone has 14 **Ring Tones** available for differentiating ring from one phone to another. Four of the tones are stored in the phone's permanent memory; the remaining ten tones are in the system's memory. Four of these ten can be downloaded into the phone's memory for use as the 5th to 8th **Ring Tone**.

operation

To download a Ring Tone from System to the phone's memory:

- Press **[TRANS/PGM]**,
- Dial 1 for Ring Tones,
- Dial 5 for Ring Tone download,
- Dial the memory location to receive the tone (5-8),
- Dial tone number 0-9, tone is heard,
- Press **[HOLD/SAVE]** to download.

To select a Ring Tone from phone's memory:

- Press the **[TRANS/PGM]** button,
- Dial 1 for Ring Tones,
- Dial 1 or 2 for Internal or External ring,
- Dial tone number 1-8,
- Press **[HOLD/SAVE]** to make the selection.

3.5 Answering Calls at Night

In the Night mode, **Loud Bell Control** may be used to send ring signals to external bells. You may then answer these calls with **Universal Night Answer (UNA)**.

OPERATION

To answer a call during Night mode ringing over an external bell:

- Lift the handset,
- Dial the UNA code **567**.

3.6 Answering Calls to Other Stations

When nearby stations are ringing, you may pick-up (answer) the call. You may select to answer a call ringing at a specific station (**Directed Call Pick-Up**) or you may choose to answer the oldest call ringing to your station group (**Group Call Pick-Up**). Assign a Flex button with the Group Call Pick-Up code (566) for one-touch access.

NOTE—Pick-Up will not answer calls on the ringing station's Private Line unless you also have an appearance of the Private Line.

OPERATION

To answer a call ringing at another station:

- Lift the handset,
- Dial **7** (Directed Call Pick-Up code),
- Dial the Intercom Number of the ringing station; call is connected.

To answer a call ringing at a station in your group:

- Lift the handset,
- Dial **566** (Group Call Pick-Up code), the call is connected.

3.7 Using Do-Not-Disturb (DND) to Block Incoming Calls

When you need quiet, you can activate Do-Not-Disturb and the phone will not receive calls. Internal callers will receive a fast busy tone and the display will show the DND status. Activate Do-Not-Disturb while busy, (**One-Time DND**); DND will be active only for the duration of the present call and requires a **DND** button.

When an Executive activates DND, calls are forwarded to the paired Secretary automatically.

The Attendants and Secretary may be able to activate **DND Override** and **Intrude** on the call. The Attendants may also cancel DND at other stations.

OPERATION

To toggle DND ON and OFF:

- Press the **[DND]** button.

3.8 Forwarding Calls

3.8.1 Forwarding calls to another station or Voice Mail

Incoming calls may be diverted to other resources of the system. Resources include other stations, **VMIM/VSF Voice Mail** and **External Voice Mail**. Your LCD and the LCD of the forward receiver will both indicate the forward status.

Call Forward can be activated from your phone or from a different station (**Call Forward, Remote**). You may define the conditions or 'type of forward' as below:

- 1: **Unconditional**—all calls to the station, except recalls, are forwarded internally or externally.
- 2: **Busy**—Immediately forwards all calls, except recalls, when the station is busy.
- 3: **No Answer**—forwards all calls to the station, except recalls, when the station does not answer within the No Answer timer.
- 4: **Busy/No Answer**—forwards calls if the station is busy or does not answer within the No Answer timer.

When you forward calls from a different station, you may need to enter your **Authorization Code**.

Calls on a Private Line will not forward except to a station with an appearance of the Private Line or to Voice Mail.

OPERATION

To activate Call Forward from your phone to another phone or internal system resource:

- Lift the handset,
- Press **[FWD]** or dial 554 (Call Forward code),
- Dial the type of forward code 1-4,
- Dial the destination number.

To deactivate Call Forward from your phone:

- Press **[FWD]** or dial 554,
- Press the # key.

To activate Call Forward for your phone from a different phone (Call Forward, Remote):

- Lift the handset,
- Press **[FWD]** or dial 554,
- Dial 0 (Remote Call Forward code),

- Dial your Authorization Code (Station number & Password),
- Dial the 'type of forward' code 1-4,
- Dial the destination number.

To deactivate Call Forward, Remote:

- Lift the handset,
- Press **[FWD]** or dial 554,
- Dial 0 (Remote Call Forward code),
- Dial your Authorization Code (Station number & Password),
- Press the # key.

3.8.2 Forwarding calls to an external number

Forward calls to an external CO/IP destination; calls can be forwarded from an internal station or a remote location. You may define the conditions or 'type of forward' as below:

- 1: **Unconditional**—all calls to the station, except recalls, are forwarded internally or externally.
- 2: **Busy**—Immediately forwards all calls to the station, except recalls, when station is busy.
- 3: **No Answer**—forwards all calls to the station, except recalls, when the station does not answer within the No Answer timer.
- 4: **Busy/No Answer**—forwards calls if the station is busy or does not answer within the No Answer timer.

When you forward calls from a different station or a remote location, you may need to enter your *Authorization Code*. In addition, from a remote location, you must access the system through a *DISA* enabled CO line.

OPERATION

To activate Call Forward, Off Premise (forward to an external number) from your phone:

- Lift the handset,
- Press **[FWD]** or dial 554,
- Dial the 'type of forward' code 1-4,
- Press **[SPEED]**,
- Dial Speed Dial bin number,
- Replace the handset, return to idle.

To activate Call Forward, Off Premise (forward to an external number) from a different phone:

- Lift the handset,
- Press **[FWD]** or dial 554,

- Dial 0 (Remote Call Forward code),
- Dial your Authorization Code (Station number & Password),
- Dial the 'type of forward' code 1-4,
- Press **[SPEED]**,
- Dial Speed Dial bin number,
- Replace the handset, return to idle.

To activate Call Forward, Off Premise (forward to an external number) from a remote location:

- Lift the handset,
- Dial the telephone number of a DISA assigned CO line,
- While receiving dial-tone, dial the Call Forward feature code 554,
- Enter your Authorization Code (Station & Password),
- Dial the 'type of forward' code 6-9,
- Dial Speed Dial bin number,
- Replace the handset, return to idle.

3.8.3 Forwarding callers to a Text Message

Using an iPECS Phone, the system can be setup to return a 'Text Message' to internal callers. When calling your Station, Internal callers will automatically receive the selected message or you can send a text message you select in response to an internal call, **Silent Text Message**. There are 11 **Custom Display Messages** each up to 24 characters. Ten assigned by the Attendant and one assigned by you, see [Station Speed Dial Character entry chart](#).

In addition, there are ten fix Pre-defined Text Messages; some allow auxiliary input for time, date, etc. (as shown in message list).

Message 01: LUNCH RETURN AT hh:mm

Message 02: ON VACATION
RETURN AT DATE mm:dd

Message 03: OUT OF OFFICE
RETURN AT TIME hh:mm

Message 04: OUT OF OFFICE
RETURN AT DATE mm:dd

Message 05: OUT OF OFFICE
RETURN UNKNOWN

Message 06: CALL (enter up to 17 digits)

Message 07: IN OFFICE STA xxxx

Message 08: IN MEETING
RETURN AT TIME hh:mm

Message 09: AT HOME

Message 10: AT BRANCH OFFICE

OPERATION**To activate Custom or Pre-defined Message Forward:**

- Press **TRANS/PGM**,
- Dial User Program feature code 51,
- Dial the two-digit text Message code (00-20),
- Dial any auxiliary input for messages 01-04 and 06-08,
- Press **HOLD/SAVE**, forward confirmed.

To cancel activated Message;

- Press the flashing **FWD** button or dial 554,
- Dial #.

To program the Station Custom Message (00) at your station:

- Press **TRANS/PGM**,
- Dial User Program feature code 52,
- Enter Message contents, up to 24 characters, see [section 4.3.4](#)
- Press **HOLD/SAVE**, message saved.

4. Placing a call

4.1 Internal Calls

4.1.1 Placing Intercom calls

You can place calls to other stations in the system over the Intercom. The call will ring, or for an **ICM Voice Announce** call, a splash tone will be heard. Ring or Voice Announce is normally determined by settings at the called station but you may change this by dialing '#' after calling the user. By changing the mode, a Voice Announce call will ring or a ringing ICM call will allow Voice Announce (toggle).

You can assign a Flex button for **Direct Station Selection/Busy Lamp Field (DSS/BLF)**. A **DSS/BLF** button lets you call the other station with a single button press. The button LED displays the other station's status, ON, is busy, OFF is idle.

When you go off-hook, you may connect to another station or system resource automatically. This **Prime Line Preference** may be immediate or delayed allowing you to take other actions during the delay. Otherwise, you may press another Flex button before going off-hook to override Prime Line Preference.

If you go off-hook and take no action, Intercom dial-tone will time-out and after receiving **Howler Tone**, your phone will be placed out-of-service in **Intercom Lock-Out**. You must hang-up to return to an idle state.

OPERATION

To place an Intercom call:

- Lift the handset,
- Dial the Intercom number of the desired station,
- At answer or Splash tone, speak to the called party.

4.1.2 Using Camp-On when calling a busy station

If your called party is busy, you may activate **Camp-On**, **Callback** or **Voice Over** to the station. With **Camp-On**, wait off-hook for the called station to answer. With **Callback**, the system will call you when the busy station goes idle. After you answer, the system calls the previously busy station.

If you are the Attendant or Secretary, you may activate **Intrusion**. You may also use **Step Call**; dial the next station by dialing just the last digit of the Intercom number.

OPERATION**To Camp-On (wait off-hook) for a busy station:**

- Dial *, and wait for an answer.

To Callback (wait on-hook) for a busy station:

- Press **CALL BACK** and hang-up.

To make a Voice Over announcement to a busy station:

- Dial #, after splash-tone, speak.

4.1.3 Leaving a Message Wait

If the called user does not answer or is in DND, you may leave a **Message Wait**. The called user will receive a Message Wait indication; the LED of the **CALL BACK** button will flash.

OPERATION**To activate Message Waiting:**

- Press the **CALL BACK** button and hang-up.

4.2 External Calls

4.2.1 Placing external CO/VoIP calls

External calls are placed on CO/IP lines. These 'lines' are accessed either by a button on the iPECS Phone assigned as a **CO/IP line** or by dial codes. The CO/IP lines are grouped for different types of calls, local, long distance, etc. Using the **CO/IP line group** code, you will be able to access any line from the group. A Flex button on the iPECS Phone assigned as a **LOOP** button lets you access a line from a group. Dial codes for access to CO/IP lines are:

Individual CO/IP line access

88 + Line number (01-42 for iPECS-100, 001-200 for iPECS-300 & 600).

CO/IP Group access

801-820 for iPECS-100, 801-872 for iPECS-300 & 600

Any CO/IP Line access

9

When dialing on a CO line, which uses pulse style signals, you may activate **Dial Pulse to Tone Switchover** changing to DTMF style dialing for banking services, etc.

When placing an IP call, an IP address is dialed using the "*" key in place of the dot.

If **Least Cost Routing** is set-up, the number you dial will be analyzed and the system will place the call on the least expensive route.

You may be assigned **Dialing** and/or **CO/IP Line Access Restrictions**, in which case you will receive error tone if you attempt to dial or access a restricted number/CO/IP line. **CO/IP line** and **Station Class Of Service (COS)**, which establish dialing restrictions, may vary during Day and Night operation (**Day/Night COS**).

You may need to enter an **Authorization code** before placing calls, in which case you will receive a second dial tone.

Your external calls may be subject to **Call Time Restrictions**, you will receive a **Call Warning Tone** prior to disconnect.

NOTE—In the event of an emergency, assigned Emergency numbers (ex., a 911 call) may be dialed from any station on the System, regardless of a Station's dialing restrictions (COS).

OPERATION

To place an external call:

- Lift the handset,
- Select/dial the CO/IP line/group,
- Dial the desired number.

4.2.2 Waiting for the next available CO/IP line

If all the lines connected to your system are busy, you will receive an All Trunks Busy signal. You may request to be notified when a line becomes free.

OPERATION

To activate a queue if the selected/dialed line is busy:

- Select/dial a busy CO/IP line button,
- Press the **CALL BACK** button,
- Return to an idle state by going on-hook; when the line comes available, the Station will be notified with ringing.

4.2.3 Account Codes: Tracking External calls for billing

In some cases, you or your company may desire to track calls for billing or other purposes. You may enter an **Account Code**, which is output from the system to a printer in the **SMDR** report. You must have an **Account Code Flex** button (refer to *Assigning features to Flex buttons*).

OPERATION

To enter an Account Code before the call:

- Lift the handset,
- Press the assigned **ACCOUNT CODE** button,
- Dial the Account Code (1-12 digits),
- Dial *; Intercom dial tone is heard,
- Place the CO/IP call as normal.

To enter an Account Code during a call:

- Press the assigned **ACCOUNT CODE** button,
- Dial the Account Code (1-12 digits),
- Dial *.

4.2.4 Disabling dialing from your phone

You can temporarily 'Lock' your phone by activating **Temporary COS**, which will deny all dialing from the phone. To deactivate **Temporary COS** you must enter the station's Authorization code.

OPERATION

To activate Temporary COS:

- Press **[TRANS/PGM]**,
- Dial User Program code 21,
- Press **[HOLD/SAVE]**.

To deactivate Temporary COS:

- Press **[TRANS/PGM]**,
- Dial User Program code 22,
- Dial your Authorization code,
- Press **[HOLD/SAVE]**.

4.2.5 Temporarily overriding dialing restrictions at a phone

Override the dialing restrictions at any phone by activating **Walking COS**. The **Walking COS** dialing restriction levels are applied for a single call only. For multiple calls, you will need to reactivate **Walking COS** or use the **[FLASH]** button to regain outside dial tone.

OPERATION

To activate Walking COS:

- Press **[TRANS/PGM]**,
- Dial User Program code 23,
- Dial your Authorization Code (station number and password),
- Place call as normal.

4.3 Using Automated Dialing

4.3.1 Using Last Number Redial (LNR)

The last number dialed on an external call is automatically saved in the **Last Number Redial (LNR)** buffer. For users of an iPECS Display Phone, the system will store the numbers dialed on the last ten calls.

OPERATION

To dial the Last Number for an external call:

- Lift the handset,
- Press **[SPEED]** or dial 552,
- Press **[▼ VOLUME ▲]** to select from the last 10 numbers dialed,
- Press **[HOLD/SAVE]**.

4.3.2 Using and Entering Save Number Dial

You may store the last number dialed on an external call to the **Save Number Dial** buffer for convenient dialing at a later time. The Save Number is stored until you save new number.

OPERATION

To place a call using Save Number Dial:

- Lift the handset,
- Press **[SPEED]**.
- Dial #

To store a number in the Save Number Dial:

- While on an outgoing external call, press **[SPEED]** twice.

4.3.3 Using System Speed Dial Numbers

The iPECS-100 system has memory allocated for 800 **System Speed Dial** numbers (bins 200-999). The iPECS-300 & 600 systems each have memory allocated for 3000 System Speed Dial numbers (bins 2000-4999). You may, if allowed, use the **System Speed Dial** to dial frequently called numbers.

In some cases, these numbers are divided into groups called **System Speed Zone Groups**. In this case, you may access some numbers and not others and your dialing restrictions may be invoked.

Only an Attendant can assign **System Speed Dial** numbers.

OPERATION

To place a call using System Speed Dial:

- Lift the handset, or press the **Speaker** button,
- Press **Speed**,
- Dial the desired System Speed Dial bin number (200-999 for iPECS-100, 2000-4999 for iPECS-300 & 600).

4.3.4 Using and Entering Station Speed Dial Numbers

Each station in the iPECS-100 is allocated memory for 20 **Station Speed Dial** numbers (bins 00-19) each up to 48 digits. The iPECS-300 & 600 support 100 **Station Speed Dial** numbers (bins 000-099). These numbers are entered at the user's station and may include several 'special' instructions. Special instructions and the corresponding button are:

– **Pause**, system will momentarily stop dialing.

FLASH as 1st digit – activate dial tone detect.

FLASH not as 1st digit – the system will generate a *flash on the CO line*.

CALL BACK as 1st digit – Send digits as *ISDN Keypad Facility message*.

****** as 1st digit - **Display Security**, the stored number will not be displayed when used.

****** not as 1st digit, - **Dial Pulse to Tone Switchover**, the system will switch from pulse to DTMF dialing.

When entering a Speed Dial, a 16-character name, may be associated with the number for *Dial by Name*. Characters are entered with two keystrokes as in the chart below.

Q - 11	A - 21	D - 31
Z - 12	B - 22	E - 32
. - 13	C - 23	F - 33
1 - 10	2 - 20	3 - 30
G - 41	J - 51	M - 61
H - 42	K - 52	N - 62
I - 43	L - 53	O - 63
4 - 40	5 - 50	6 - 60
P - 71	T - 81	W - 91
R - 72	U - 82	X - 92
S - 73	V - 83	Y - 93
Q - 7*	8 - 80	Z - 9#
7 - 70		9 - 90
*1 - Blank	0-00	#
*2 - : *3 - ,		

Character Entry

OPERATION

To place a call using Station Speed Dial:

- Lift the handset,
- Press **SPEED**,
- Dial the desired Station Speed Dial bin number (00-19 or 000-099).

To enter a Station Speed Dial number with CO Line and Name:

- Press **TRANS/PGM**,
- Press **SPEED**,
- Dial the desired Station Speed Dial bin number,
- Select/dial the CO/IP line/group,
- Dial the desired number to be stored,
- Press **HOLD/SAVE**,
- Enter the associated name if desired, using the Character Entry chart,
- Press **HOLD/SAVE**.

4.3.5 Using Dial by Name and Entering your Name

Dial by Name employs three 'Directories': Intercom, User or *Station Speed Dial* and *System Speed Dial*. To allow others to contact you via the Intercom directory, you must enter a name for your station, up to 12 characters.

OPERATION**To place a call using Dial by Name:**

- Press **[SPEED]** twice,
- Dial the desired directory, 1: Intercom, 2: User Speed Dial, 3: System Speed Dial, the LCD displays the first two names, in alphabetical order,
- Scroll using the **[VOLUME]** button; to enter characters, refer to the character entry chart in [section 4.3.4](#),
- Press **[HOLD/SAVE]** to place the call.

NOTE—To toggle between the name and number displays, press the **[TRANS/PGM] button.**

To enter your station user name:

- Press **[TRANS/PGM]**,
- Dial 74 (User Name Program code),
- Dial name, up to 12 characters (using the alpha-numeric entry chart in [Section 4.3.4](#)),
- Press **[HOLD/SAVE]**.

4.3.6 ACNR: To retry a busy external number until answered

When making an external call and a busy signal is received, the system can be set to retry the number until the call is connected, the feature is cancelled, or the maximum number of retries is attempted—this is Automatic Called Number Redial (ACNR).

For each retry, the system will activate your speaker then place the call with the microphone muted. When the remote end answers, you must select the **[SPEAKER]** button or lift the handset. Either of these actions will cancel the ACNR request as well as connect you to the remote party. A Redial button must be assigned at the station.

OPERATION**To set up an ACNR, while on an outgoing call:**

- Press **[REDIAL]**,
- Hang-up handset.

To cancel the ACNR request:

- Press **[REDIAL]**.

5. Transfer, Conference & Other Call Handling

5.1 Call Transfer: Sending a call to a different destination

You can send an active call to another station or other resource of the system, **Call Transfer**. You can screen the transfer with the receiving party (**Screened Call Transfer**) or complete the transfer without screening (**Unscreened Call Transfer**). Transferred calls, internal or external, are placed in **Transfer Hold**, will receive **MOH** and will recall if not answered in a timely manner.

If an **Unscreened Transfer** call encounters an error or DND, it immediately recalls you.

DSS/BLF buttons may be employed to transfer calls.

OPERATION

To Transfer an active call:

- Press **[TRANS/PGM]**,
- Call receiving party,
- For Unscreened Call Transfer, hang-up,
- For Screened Call Transfer, at answer or Splash tone, announce call.

5.2 Call Hold: Placing a call in a waiting state

You may place an active Internal or External call in one of several holding states. In **System Hold**, other non-restricted stations may pick-up the call. In **Exclusive Hold**, only the holding station may pick-up the call.

The system is assigned a preferred hold type (System or **Exclusive**). You may override this **Hold Preference** by pressing the **[HOLD/SAVE]** button twice.

The LEDs for buttons assigned **CO/IP line** flash at distinctive rates for the holding station and other iPECS Phone users.

There are also user operations such as pressing a **[DSS/BLF]** button that will place a call in **Automatic Hold**.

Calls will remain in the held state for a period and then recall the user. This **Hold Recall** is provided with a different ring signal. If not answered in a timely manner, the Attendant will receive **Attendant Hold Recall**.

OPERATION

To place a call on Hold:

- Press **[HOLD/SAVE]**.

5.3 Broker Call: Switching between two calls

You may switch between the active call and a call on *Hold*, placing the active call on Hold acting as a broker between two or more parties, **Broker Call**. iPECS Phone users may 'broker' for multiple calls up to the number of **CO/IP line** buttons.

OPERATION

To switch between two calls, Broker Call:

- Press the desired **CO/IP line** button.

5.4 Joining Multiple People in a Conference

You can establish a **Conference** with up to 3 parties, or 24 parties when using a Multi-Party Conference Interface Module (MCIM). The other parties in the **Conference** may be internal or external.

A **Conference** can be placed on Hold and is subject to *Hold Recall*.

You may also use the Conference operation to join 2 external parties in a private conversation. This is an **Unsupervised Conference**, which is not subject to the normal Hold Recall operation.

A **CONF** Flex button is required.

OPERATION

To establish a Conference:

- Establish call with one of the desired conference parties, and press the **CONF** button when connected,
- Establish call with another conference party, and press the **CONF** button when connected (repeat as needed to add more parties),
- Press **CONF** again to establish the conference.

To place a Conference on Hold:

- Press the **HOLD/SAVE** button; the **CONF** button LED will flash.

To retrieve the Conference from Hold:

- Press **CONF**.

To establish an Unsupervised Conference:

- Establish conference with two external parties,
- Press **CONF**.

To retrieve an Unsupervised Conference:

- Press **CONF**.

5.4.1 Setting up & Joining a Conference Room

In addition to establishing a Conference, up to 9 **Conference Rooms** can be set up including up to 24 parties when using a MCIM. When setting up a Conference Room, a password can be designated for invitees (internal and external parties) to use for accessing the established Conference Room.

OPERATION

To set-up a Conference Room:

- Press the **TRANS/PGM** button,
- Dial 53 to create a Conference Room,
- Dial the desired Conference Room number (1-9),
- If desired enter a password for the Conference Room (up to 12 digits),
- Press **HOLD/SAVE** to establish the Room.

To join a Conference Room:

- Lift the handset,
- Dial 59 (Conference Room entry code),
- Dial the Conference Room Number,
- Dial the Conference Room password.

To delete a Conference Room:

- Press the **TRANS/PGM** button,
- Dial 54 (delete Conference Room code),
- Dial the Conference Room number (1-9),
- Dial the Conference Room password,
- Press **HOLD/SAVE** to delete the Conference Room.

5.5 Call Park: Placing a call on hold to Page

A user may transfer an active CO/IP call to a special holding location (Park Orbit), which can be accessed easily from any station in the system. Typically, this feature is used with *Paging* to notify the desired User of **Call Park**.

Parked calls are subject to *Hold Recall* after the **Call Park** timer.

OPERATION

To park an active external call:

- Press **TRANS/PGM**,
- Dial the Park Orbit code (601-610 for iPECS-100 or 601-619 for iPECS-300 & 600),
- Return to idle.

To retrieve a parked call:

- Lift the handset,
- Dial the Park Orbit code (601-610 for iPECS-100 or 601 to 619 for iPECS-300 & 600).

5.6 Two-Way Record: Recording calls

You may record an active external conversation in your *Voice Mail Box*. A **RECORD** button is required to access this feature.

OPERATION

To activate Two-Way Record while on a CO/IP call:

- Press **RECORD**, record warning tone heard and recording starts.

To stop Two-Way Record while on a CO/IP call:

- Press **RECORD** or hang-up and return to idle.

6. Leaving & Responding to Messages

The iPECS Phone allows you to send and receive several types of messages. These are accessed via the Message Summary Display, and described in the following paragraphs:

- 1: ST—Station Message Wait,
- 2: CL—CLI Message Wait
- 3: VS—VSF Message Wait
- 4: VM—Commercial Voice Mail
- 5: FS—Feature server
- 6: MS—SMS message wait.

6.1 Responding to a Station Message Waiting Indication

Another station can leave a **Station Message Waiting** indication when you do not answer or your phone is in *DND*. A flashing MSG LED on the iPECS Phone indicates a Message Waiting. As a further notification, a **Message Wait Reminder Tone** can be provided. You may review and delete messages as well as respond with a call back.

OPERATION

To review your Station messages:

- Press **CALL BACK**, the LCD shows the Message Summary display,

ST	CL	VS	VM	FS	MS
001	001	005	006	001	004

- Dial 1 to view the Station messages,
- Press the **▼ VOLUME ▲** button to scroll through the messages.

To return a call from the current message:

- Press **SAVE** button to return the call from the current message.

To delete the Station Message Wait:

- Press the * key,
- Dial 1.

To delete all Message Waits:

- Press the **SPEED** button,
- Press the * key twice.

6.2 Responding to a CLI Message indication

When external calls to your phone are not answered and Caller Identification is provided from the network, a Calling Line ID. (CLI) message is logged. You may review, delete or return these messages.

OPERATION

To review CLI Messages using a Flex button:

- Press the flashing **CLI MESSAGE** button, the first CLI message information is displayed,
- Press **▼ VOLUME ▲** to scroll through CPI message wait information.

To review CLI Messages using the Summary Display:

- Press the flashing **CALL BACK** button, the LCD shows the Message Summary display,

ST	CL	VS	VM	FS	MS
001	001	005	006	001	004

- Dial 2, the first CLI message information is displayed,
- Press **▼ VOLUME ▲** to scroll through CLI message wait information.

To delete the current CLI Message:

- Press the * key, the next CLI message is displayed.

To delete all CLI Messages:

- Press **SPEED**,
- Press * twice.

To return the current CLI message:

- Press **HOLD/SAVE**.

6.3 Getting Voice Mail Messages

When callers are forwarded or recall to your Voice Mail Box, they can leave a voice message. Your Voice Mail Box is part of the integrated **Voice Mail** module, the **iPECS Feature Server** or an external Voice Mail system.

These Voice Mail systems allow access to and management of the received voice messages. The **VMIM/VSF** allows you to listen to, save, and forward messages. While in your Mail Box, you have control of your password and Mail Box greeting. In addition, you can remotely control Call Forward for your station from the Voice Mail. You will need to register an **Authorization Code** for your station to access VSF Voice messages.

OPERATION**To retrieve Voice Mail locally using a Flex button:**

- Press the VM Flex button,
- Dial your Mail Box number and corresponding password to receive the 'Number of Messages' prompt,
- Dial desired option codes,
- At completion of session, hang-up to return to idle.

To retrieve Voice Mail locally using the CALL BACK button:

- Press the flashing CALL BACK button, the LCD shows the display,

ST	CL	VS	VM	FS	MS
001	001	005	006	001	004

- Dial 3 for VMIM/VSF, 4 for external VM or 5 for Feature Server Voice Mail,
- After the prompt enter your station number and password, to receive the 'Mail Box & Password' prompts sequentially,
- Dial desired option codes,
- At completion of session, hang-up to return to idle.

To access Voice Mail Box from a Remote Location:

- Lift the handset,
- Dial the telephone number of a *DISA* CO line assigned for answer by the VMIM/VSF Auto Attendant,
- Upon answer, dial # to receive 'Mail Box & Password' prompt,
- Dial the Mail Box and corresponding password to receive the 'Number of Messages' prompt,
- Dial desired option codes, then hang-up.

6.4 Sending and Receiving Short Text Messages

You can exchange short text messages (max. 100 alphanumeric characters) with other iPECS display phone users. These messages will activate the CALL BACK button LED and are displayed on the iPECS Phone LCD.

OPERATION**To send an SMS message to another iPECS display phone user:**

- Press the TRANS/PGM button,
- Dial 36 (SMS send code),
- Dial 1 to resend an existing message, or 2 to edit an existing message or to send a new one,
- Dial the station range to receive the message (to send to a single station enter the station number twice),

- Enter your message using 2 key strokes for each character, see [section 4.3.4](#),
- Press **HOLD/SAVE** to send your message.

To view your received Short text messages:

- Press the flashing **CALL BACK** button, the LCD shows the Message Summary display,

ST	CL	VS	VM	FS	MS
001	001	005	006	001	004

- Dial 6 (retrieve SMS), the first two SMS messages display in brief,
- Dial the Message number to view the entire SMS message.

To delete received Short text messages:

- Press #,
- Dial 1 to delete the message, 2 to cancel or 3 to delete all received Short text messages.

7. Remote System Access

7.1 Direct Inward System Access (DISA)

DISA (Direct Inward System Access) allows remote users to gain access to the system's resources. The system will recognize remote user dialed inputs (call other stations, place calls over CO/IP lines, review voice mails, etc). Remote users may be required to enter an *Authorization Code*.

OPERATION

To access system resources remotely:

- Call the system's DISA facility,
- Dial your authorization code (station number and password),
- Dial as needed for the desired system resource.

7.2 Mobile Phone Extension

When away from your desk or office you can place and receive iPECS calls on a registered mobile phone. You may need to activate the Mobile Phone Extension feature and assign the Mobile Phone number. This feature is effective only through an ISDN CO line.

OPERATION

To register a mobile phone number:

- Press the **TRANS/PGM** button,
- Dial 37,
- Dial the mobile phone number,
- Press the **HOLD/SAVE** button.

To activate a registered mobile phone from the user's station:

- Press the **TRANS/PGM** button,
- Dial 38,
- 1 to activate, 0 to deactivate,
- Press the **HOLD/SAVE** button.

To place a call from the mobile extension using the iPECS:

- Dial the ISDN DID number of the station, the system will check the CLID, answer the call and the user will receive intercom dial tone,
- Place internal or external iPECS call as normal.

To Transfer a call from the mobile extension using the iPECS:

- Press the * key while on an iPECS call,
- Dial the desired extension, the call is transferred and the mobile phone returns to idle.

NOTE—The mobile extension may reconnect to the transfer by pressing the # key.

8. Miscellaneous Features

8.1 Background Music and Music on Hold

Two audio sources can be connected to the system. These sources or an internal source provide input for Background Music (BGM) and Music On Hold (MOH). In addition, a recorded message from the VMIM can be used. BGM is played over the speakers of the iPECS Phone when the station is idle. MOH is played to callers placed on *Hold*.

There are four possible selections for BGM and MOH:

- 1: Off
- 2: Source BGM1
- 3: Source BGM2
4. VMIM message

OPERATION

To turn on Background Music:

- Press **HOLD/SAVE** to cycle through the BGM selections.

8.2 Using Internal, External and Meet-Me Paging

The User can broadcast announcements to other stations and/or external speakers. Stations are assigned to one or more of the **Internal Page Zones**. The system has two **External Page Zones** that can be connected to external speakers.

Page Zone codes are:

- | | |
|---------------------------|--------------------------|
| 1: Internal Page Zones | iPECS 100: 501-510 |
| | iPECS 300 & 600: 501-535 |
| 2: Internal All Call Page | 543 |
| 3: External Page Zones | 545-546 |
| 4: External All Call Page | 548 |
| 5: All Call Page | 549 |

If the desired Page Zone is busy, the User can elect to be recalled when their turn comes in the queue. Users can also request a paged party answer the Page using **Meet-Me Paging**. In this case, the paged party may answer the page from any phone in the system by dialing the Meet-Me code.

OPERATION**To make a page:**

- Lift the handset,
- Dial the desired Page zone,
- If assigned, after page warning tone, make announcement.

To queue for a page when busy is received:

- Press **CALL BACK**,
- Replace the handset returning to idle.

To answer a Meet-me-Page:

- Lift the handset,
- Dial the Meet-Me-Page code **544**.

8.3 Push-To-Talk (PTT) Page

iPECS Phones can be assigned as a member of one or more of the system's nine Push-To-Talk (PTT) page groups. Users separately log-in or log-out of any one or all PTT groups to which the phone is assigned. Once logged in, place or receive one-way page announcements to/from other users who are logged in to the same PTT group.

OPERATION**To log-in to a PTT group:**

- Dial #0, the PTT Log-in/out code,
- Dial the desired PTT group number (1-9 and 0 for all groups).

To log-out of the PTT group(s):

- Dial #0, the PTT Log-in/out code,
- Press the * key.

To place a page announcement to the active PTT group:

- Press and hold the **PTT** Flex button,
- After confirmation tone, make page announcement.

8.4 Wake-Up Alarm

iPECS supports an Alarm clock for each station in the system. The alarm clock can be set to repeat daily or as a one-time alarm. When responding to the alarm by lifting the handset, BGM will be provided.

OPERATION

To set the Wake Up Alarm clock:

- Press **TRANS/PGM**,
- Dial the Station User Program code 41,
- Dial 2-digit hour and minute for alerting,
- For a daily (repeating alarm), dial #,
- Press **HOLD/SAVE**.

To erase Wake-Up:

- Press **TRANS/PGM**,
- Dial the Station User Program code 42,
- Press **HOLD/SAVE**.

8.5 Alarm/Door Bell

The system can monitor external **Alarm** or **Door Bell** contacts:

Alarm Monitor—should the external contact activate, a unique Alarm Ring signal and LCD display may be received. To restart the monitor circuit, the external contacts must be deactivated and the Alarm Ring signal terminated.

Door Bell—a unique Door Bell Ring (single tone burst) may be received each time the external contact is activated. A system contact also can be controlled to act as a **Door Open** contact.

OPERATION

To terminate the Alarm signal:

- Dial **565 (Alarm Stop code)**.

To activate the Door Open contacts:

- Lift the handset,
- Dial **Door Open** code #* and contact number 1 to 4.

NOTE—**Contacts 3 & 4 are only available in the iPECS -300 & 600.**

8.6 Power Fail Transfer

When AC power to the system fails, back-up operation may be provided with back-up batteries or **Power Fail Transfer (PFT)**. When battery back-up is provided, the station will operate normally. When **PFT** is implemented, a SLT is connected to a CO line by the system. This SLT can be used as any normal SLT, providing service while power is out.

8.7 System Voice Memo

The integrated Voice Mail modules incorporate several **Voice Memos** to provide Station Users with general information such as station number, date, time, and feature status. **Voice Memos** are heard over the speaker of the iPECS Phone and over the handset for SLTs.

For the **Station Status Memo**, the following items are reported:

ICM Signaling Mode (Handsfree/Tone/Privacy)

Station IP Address

Station Mac Address

Number of messages x (x: number of all message waiting)

Wake-Up Time (hh:mm)

Do Not Disturb

Forwarded to station xxx

Forwarded to speed bin xxx

Queued CO/IP line xxx

Locked (Temporary COS)

COS x

NOTE—Only activated features are announced.

OPERATION

To hear Date & Time memo:

- Dial Voice Memo feature code (**661** for iPECS-100 or ***661** for iPECS-300 & 600), date and time memo is heard, "Date is May 2nd. Time is xx:xx pm".

To hear Station Number Prompt:

- Dial Voice Memo feature code (**662** for iPECS-100 or ***662** for iPECS-300 & 600), the station number memo is heard, "This is station 150".

To hear Station Settings:

- Dial Voice Memo feature code (**663** for iPECS-100 or ***663** for iPECS-300 & 600), Station Status Memo is heard.

8.8 Hot Desk

iPECS phones in the system may be assigned for **Hot Desk** operation. These **Hot Desk** phones let you log-on and use the Hot Desk phone as if it were your station. Once logged-on, the Hot Desk station will take on the attributes assigned to your station number and you can make calls as normal. When logged-out, calls to your station are forward to the destination you chose.

OPERATION

To Log on to a Hot Desk station:

- Lift the handset,
- Dial “* 0”,
- Dial your Authorization Code (Station number and Password).

To Log out of the Hot Desk station:

- Press the **TRANS/PGM** button,
- Dial * twice,
- Use the **▼ VOLUME ▲** to select a call forward destination for your calls, speed dial, joined mobile phone, VMIM/VSF, or VM group,
- Press the **HOLD/SAVE** button.

9. Working with PBX, Centrex & ISDN features

9.1 Access PBX or Centrex

The iPECS has been designed to operate with a host PBX system or Centrex services from your service provider. The iPECS connects to such a host with analog CO lines.

When accessing a CO line, the phone will act as an extension of the host, allowing access to the host system features using the host dial codes.

While on a call, use the iPECS **Flash** feature to transfer calls to other host extensions or access features of the host. The **Flash** feature may be used on other CO lines to regain dial tone from the CO line without relinquishing control of the CO line to place another call.

OPERATION

To access PBX or Centrex features while idle:

- Lift the handset,
- Select/dial access a PBX/Centrex CO line,
- Dial PBX/Centrex feature code.

To access PBX/Centrex features while on a PBX/Centrex CO line:

- Press **[FLASH]**,
- After receiving new dial tone, dial PBX/Centrex feature code.

9.2 Access the ISDN Network

9.2.1 Using the Keypad facility to access ISDN features

Access to certain features of your ISDN services requires that dialed digits be sent to the ISDN as data and not tones. In this case, dialed digits are sent as 'Keypad messages'.

A **[KEYPAD FACILITY]** button must be assigned using the *Flex Button program* procedures. Once active, dial into the ISDN for services; however, actions other than dialing will deactivate the 'Keypad message' operation.

OPERATION

To activate Keypad Facility operation:

- Press the **[KEYPAD FACILITY]** button to switch to keypad mode,
- Dial as desired.

To deactivate Keypad Facility operation:

- Press **[KEYPAD FACILITY]**,

Or

- Press a Feature or Flex button.

9.2.2 Using ISDN Supplementary Services

ISDN service providers may incorporate features similar to those of Centrex. These **ISDN Supplementary services** are provided on a subscription basis and, as with Centrex, are accessed using the *Flash* button on an iPECS phone.

Using supplementary services an ISDN line can be placed on Hold and a second call placed on the line. You may then alternate between the two held calls (Broker Call) using the **HOLD** button. An ISDN line conference can be established using the **FLASH** and **CONF** buttons. The conference can also be placed on hold.

OPERATION

While on an ISDN CO line, to access ISDN Supplementary services:

- Press **FLASH**,
- Press **HOLD/SAVE**, **CONF**, or **CO line** assigned button to activate the desired feature.

9.2.3 Activating ISDN Caller ID Restriction

iPECS Phone users can restrict the transmission of Caller ID to the far-end. This may be a subscription service of your carrier. Separate Flex buttons are required to activate outgoing, Connected Line (COL), and incoming, Calling Line ID (CLID) restriction.

OPERATION

To restrict Caller ID:

- Lift the handset,
- Press the **CLIR/COLR** assigned button,
- Place call as usual.

10. Setting Features & Flex buttons

10.1 Entering Station Program Data

A special code set is available for iPECS Phone users to assign certain attributes such as Authorization Codes (Passwords). After entering the **User Program** mode, you dial the codes to select the attribute and setting. Once selected, the setting is saved. A list of the User Program codes, the feature/function and any input required are given in [Appendix B](#).

OPERATION

To assign user programmable station attributes:

- Press **[TRANS/PGM]**,
- Dial desired User Program code,
- Press **[HOLD/SAVE]**.

10.2 Assigning Features to Flex Buttons

You may assign features and functions to the Flex buttons on your iPECS Phone. If allowed, you may even assign CO/IP lines to the Flex buttons. Flex buttons may be assigned for most features providing **One-Touch** feature activation (e.g., a Flex button may be assigned to access the [Account Code](#) feature and may include the Account code digits, as a **[ONE-TOUCH ACCOUNT CODE]** button).

Features that may be assigned to a Flex button include:

DSS/BLF – Enter station number,

Speed Dial – Enter Station/System Speed dial bin number,

Flex Numbering Plan – Enter Flex Numbering Plan code, see [Appendix A](#),

User Program Code – Press **[TRANS/PGM]** and enter a User Program code, see [Appendix B](#), or

CO/IP line – Enter the CO/IP line or group number.

OPERATION

To assign a feature to a Flex button:

- Press **[TRANS/PGM]**,
- Press the desired Flex button,
- Dial desired code and required inputs. For User Program codes, first press the **[TRANS/PGM]**,
- Press **[HOLD/SAVE]**.

11. Appendix A Flexible Numbering Plan

Feature	iPECS 100	iPECS 300	iPECS 600	Remark
<i>Intercom Call</i>	100-169	100-399	1000-1599	
<i>Internal Page Zone</i>	501-510	501-535	501-535	
<i>Internal All Call Page</i>	543	543	543	
<i>Meet Me Page</i>	544	544	544	
<i>External Page Zone 1~2</i>	545-546	545-546	545-546	
<i>External All Call Page</i>	548	548	548	
<i>All Call Page (Internal/External)</i>	549	549	549	
<i>SMDR Account Code Enter</i>	550	550	550	SLT use only
<i>Flash Command to CO Line</i>	551	551	551	SLT use only
<i>Last Number Redial</i>	552	552	552	SLT use only
<i>DND (Toggle On/Off)</i>	553	553	553	SLT use only
<i>Call Forward</i>	554	554	554	
<i>Speed Dial Programming</i>	555	555	555	SLT use only
<i>Message Wait/Callback Enable</i>	556	556	556	SLT use only
<i>Message Wait/Callback Return</i>	557	557	557	SLT use only
<i>Speed Dial Access</i>	558	558	558	SLT use only
Cancel DND/FWD/Pre MSG	559	559	559	SLT use only
<i>CO System Hold</i>	560	560	560	SLT use only
<i>Program Mode Access</i>	561	561	561	SLT use only
Attendant Unavailable	562	562	562	

Feature	iPECS 100	iPECS 300	iPECS 600	Remark
Answering Machine Emulation	564	564	564	
<i>Alarm Reset</i>	565	565	565	
<i>Group Call Pickup</i>	566	566	566	
<i>Universal Answer</i>	567	567	567	
Account Code with bin	568	568	568	
<i>Walking COS Code</i>	569	569	569	
ACD Supervisor On/Off Duty	571	571	571	
ACD Supervisor Login	572	572	572	
ACD Supervisor Logout	573	573	573	
ACD Help Code	574	574	574	
ACD Calls In Queue Display	575	575	575	
ACD Supervisor Status Display	576	576	576	
ACD Supervisor Monitor	577	577	577	
ACD Reroute Queued Call w/answer	578	578	578	
ACD Reroute Queued Call w/o answer	579	579	579	
Enter Conference Room	59	59	59	
<i>Camp-On Answer</i>	600	600	600	SLT use only
<i>Call Parking Locations</i>	601- 610	601- 619	601-619	
Group Pilot Number	620- 659	620- 667	620-667	
<i>Station User VMIM/VSF Features</i>	66	*66	*66	
<i>Call Coverage button</i>	67	67	67	
<i>Direct Call Pickup</i>	7	7	7	
<i>CO/IP Group Access</i>	8xx 01-20	8xx 01-72	8xx 01-72	
<i>Individual CO/IP Line Access</i>	88xx 01-42	88xxx 001- 200	88xxx 001-400	
<i>Retrieve Last Held CO/IP</i>	8*	8*	8*	
<i>Retrieve Individual Held CO/IP</i>	8#xx	8#xxx	8#xxx	xx(x) = CO Line number

Feature	iPECS 100	iPECS 300	iPECS 600	Remark
<i>Access CO Line in the 1st available CO Group</i>	9	9	9	
Attendant Call	0	0	0	
VM Message Wait Enabled	*8	*8	*8	
VM Message Wait Disable	*9	*9	*9	
<i>Door Open (1st Door)</i>	**1	**1	**1	
<i>Door Open (2nd Door)</i>	**2	**2	**2	
<i>Door Open (3rd Door)</i>	**3	**3	**3	iPECS-300 & 600
<i>Door Open (4th Door)</i>	**4	**4	**4	iPECS-300 & 600
MCID Request	*0	*0	*0	
<i>AME Feature</i>	564	564	564	
Unsupervised Conference Timer Extension code	##	##	##	
<i>PTT Group Login/Logout</i>	#0	#0	#0	

12. Appendix B User Program Codes

Code	Function	Remarks	SLT
10	Enblock Mode Dialing	iPECS LIP-7000 only	
11 x	<i>Differential Ring, Intercom</i>	Select Ring Tone 1-8	
12 x	<i>Differential Ring, CO/IP line</i>	Select Ring Tone 1-8	
13 x	<i>Intercom Answer Mode</i>	Select ICM Signal mode, 1: HF, 2: TONE, 3: Privacy	
14 x	<i>Call Coverage Attribute Setting</i> (X = 1-2)	1+; On/Off, 2+: ring delay (0-9)	
15 x	<i>Station Ring Download</i>	Select download Ring Tone 0-9	
19	Ear&Mic Headset Usage	iPECS LIP-7000 only	
21	<i>Knock Down Station COS</i>		Yes
22	<i>Restore Station COS</i>	May require Authorization code	Yes
23	<i>Walking COS</i>	May require Authorization code	Yes
31	<i>Station Message Wait Retrieve</i>		Yes
32	<i>CLI/IP Message Wait Retrieve</i>		
33 x	Authorization Code (Password) Entry	Station number +up to 12 digits, no Flex button	Yes
34	Assign <input type="text" value="DID CALL WAIT"/> Button		
35	Message Wait in Executive/Secretary pair		
36	<i>Send SMS Message</i>		
37	<i>Register Mobile Extension</i>		
38	<i>Activate Mobile Extension</i>		
41 xx	<i>Set Wake-Up Time</i>	Input time, 24 hour clock	Yes
42	<i>Erase Wake-Up Time</i>		Yes
51 xx	<i>Custom/Pre-defined Message Display</i>	Select Message 00~20	Yes
52 xx	<i>Register Custom Message</i> (Message 00)	Input up to 24 characters	Yes
53	<i>Create Conference Room</i>	Input Conf Room (1-9) & optional password	
54 x	<i>Delete Conference Room</i>	Input Conf Room (1-9) & optional password	

Code	Function	Remarks	SLT
61 x	<i>Headset/Speakerphone Mode</i>		
62 x	Headset Ring Mode	1: Speakerphone, 2: Headset, 3: both	
71	LCD Display Mode		
72	Version Display		
73	<i>Background Music</i>		
74 x	<i>Station User Name Registration</i>	Input up to 7 characters	Yes
75	Display Phone IP Address		
76	Change Phone IP Address		
77	Display Phone MAC IP Address		
78	Change Mode		
79	Display Phone Version		
70	Display Soft Message		
7*	Display Serial number/Package for SMEMU		
80	Assign <input type="text" value="RECORD"/> Button	Requires VSF/External SMDI VM	
81	Assign ISDN <input type="text" value="CLIR"/> Button		
82	ISDN <input type="text" value="COLR"/> Button		
84	Assign <input type="text" value="ACCOUNT CODE"/> Button		
85	Assign <input type="text" value="LOOP"/> Button		
86	Assign <input type="text" value="ATD INTRUSION"/> Button		
88	Assign <input type="text" value="CAMP-ON"/> Button		
89	Assign <input type="text" value="KEYPAD FACILITY"/> Button		
8#	Assign <input type="text" value="OHVO"/> Button		
90	<input type="text" value="SPEED"/> Button Assignment	iPECS LIP-7000 only	
91	<input type="text" value="CONF"/> Button Assignment	iPECS LIP-7000 only	
92	<input type="text" value="CALL BACK"/> Button Assignment	iPECS LIP-7000 only	
93	<input type="text" value="DND"/> Button Assignment	iPECS LIP-7000 only	
94	<input type="text" value="FLASH"/> Button Assignment	iPECS LIP-7000 only	
95	<input type="text" value="MUTE"/> Button Assignment	iPECS LIP-7000 only	
96	<input type="text" value="MONITOR"/> Button Assignment	iPECS LIP-7000 only	
97	<input type="text" value="REDIAL"/> Button Assignment	iPECS LIP-7000 only	
98	<input type="text" value="FWD"/> Button Assignment	iPECS LIP-7000 only	
99	<i>Assign <input type="text" value="PTT"/> Button</i>		
*0	Hot Desk Login Code		
**	Hot Desk Log out Code		